


Conexión de cable a cable

Conexiones en "T" horizontal.

Calibre del cable		Carga
De paso	Derivación	
6 Alam 6	6 Alam	25
	6	25
4	4	32
	6	32
	6 Alam	32
	8	32
8 Alam	8 Alam	32
	2	45
	2 Alam	45
	4	45
2 Alam	6	32
	6 Alam	32
	8	32
	8 Alam	32
	2	45
2	2 Alam	45
	4	45
	6	32
	6 Alam	32
	8	32
	8 Alam	32
	1	45
1	2	45
	2 Alam	45
	4	45
	6	45
	6 Alam	45
	8	45
8 Alam	45	

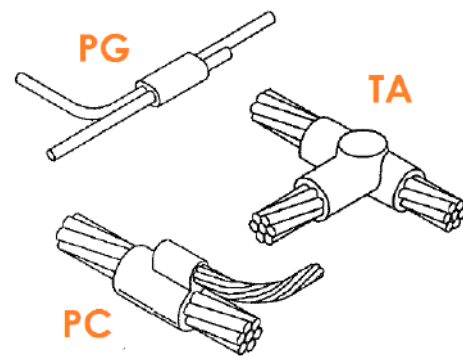

Calibre del cable		Carga
De paso	Derivación	
1/0	1/0	90
	1	45
	2	45
	2 Alam	45
	4	45
	6	45
	6 Alam	45
	8	45
2/0	8 Alam	45
	2/0	90
	1/0	90
	1	45
	2	45
	2 Alam	45
	4	45
	6	65
	6 Alam	65
	8	65
8 Alam	65	

Calibre del cable		
De paso	Derivación	Carga
350	350	200
	300	200
	250	200
	4/0	150
	3/0	150
	2/0	90
	1/0	90
	1	90
	2	90
	4	90
500	500	2-150
	350	200
	300	200
	250	200
	4/0	150
	2/0	90
	1/0	90
	1	90
	2	90
	4	90
750	750	2-250
	500	2-200
	350	250
	300	200
	250	200
	4/0	150
	2/0	150
	1/0	150
1000	1000	2-250
	750	2-250
	500	2-200
	350	250
	300	200
	250	200
	4/0	150
	2/0	150
	1/0	150

Calibre del cable		
De paso	Derivación	Carga
3/0	3/0	115
	2/0	90
	1/0	90
	1	45
	2	45
	2 Alam	45
	4	45
	6	90
	6 Alam	90
	8	90
4/0	8 Alam	90
	4/0	150
	3/0	115
	2/0	90
	1/0	90
	1	90
	2	90
	2 Alam	90
	4	90
	6	90
250	6 Alam	90
	8	90
	8 Alam	90
	250	150
	4/0	150
	3/0	150
	2/0	90
	1/0	90
	1	90
	2	90
300	2 Alam	90
	4	90
	300	200
	250	150
	4/0	150
	3/0	150
	2/0	90
	1/0	90
	1	90
	2	90
300	2 Alam	90
	4	90

CALLE VERDIN No. 1708 COL. 8 DE JULIO 1ra y 2da SECCIÓN C.P. 44910 GUADALAJARA, JAL.

TELS: 01 (33) 3162 0939, 01 (33) 3812 5682, 01 (33) 1368 1962 CEL. 044 3314 51 16 12

e-mail: rafael.salazar@relsamex.com moises.salazar@relsamex.com www.relsamex.com